

SMS User Guide- Sending Text Commands to a Unit

Sending Commands to a Unit

Commands may be sent to a device by sending a text message to the following address:
sms@agsense.net

Commands will only be accepted from the phone numbers or email addresses that have been entered in the Notification Configuration on the Wagnet.net website.

Field Commander Units:

Stop

Stop commands must include the unit's serial number or alias, a space, and then stop.

Example: 24999 stop or Test Pivot stop

Start

Start commands must include the units serial number or alias, a space, and then start.

Example: 24999 start or Test Pivot start

Stat

A Stat command may be sent to receive a message containing the pivot's last reading information.

Stat commands must include the units serial number or alias, a space, and then stat. Example:
24999 stat or Test Pivot stat

The last reading will be sent back in the following format.

Example: Test Pivot 04-26-07 12:51:24 IDLE at 178 dc:0 pressure:0

Tracker Units:

Stop

Stop commands must include the unit's serial number or alias, a space, and then stop.

Example: 24999 stop or Test Pivot stop

Start:

Trackers have a few more options on sending start commands, see the list below:

Start commands must include the units serial number or alias, a space, and then

One of the following:

START (if this is sent, it will continue the way it was before it was shut off)

START FWD DRY

START FWD WET

START REV DRY

START REV WET

Example: 24999 start fwd dry or Test Pivot start fwd dry

Stat

A Stat command may be sent to receive a message containing the pivot's last reading.

Stat commands must include the units serial number or alias, a space, and then stat. Example:
24999 stat or Test Pivot stat

The last reading will be sent back in the following format.

Example: Test Pivot 04-26-07 12:51:24 IDLE at 178 dc:0 pressure:0